



Product guide

W441, W439 Outlast streambed and flow pan

IMPORTANT

Save these instructions for reference

Recommended use

The Outlast streambed introduces running water into your outdoor play area. Contoured trays on three levels with outflow allow water (or natural loose parts) to flow down. The Flow pan adds additional water storage with a child friendly rubber plug. The Streambed provides a transition between high and low tables in a variety of configurations but is designed to empty only into the 46cm table.

⚠ WARNING

- ▲ This product is intended for use by children of immature judgment, therefore supervision is required at all times.
- ▲ Water is a drowning hazard. Do not leave pan of water unattended.

⚠ CAUTION

- ▲ Adults are responsible to prevent Outlast water tables from being employed by children in unsafe combinations with other components.

Assembly

Your Streambed comes fully assembled and ready to use. It includes the Streambed with three contoured trays and one Flow pan.

If your shipment is incomplete, please call customer service. All of our packaging is recyclable (cardboard and LDPE). Please recycle in accordance with local guidelines.

Accessories

Outlast flow pan adds an extra level and water flow possibilities.

Construction

The wooden components are manufactured from long lasting acetylated wood and finished with a nontoxic stain. All edges and corners are rounded for safety and ease of cleaning.

Stainless steel hardware is used throughout and plastic components are UV-resistant and engineered to ensure long life in outdoor environments.

Maintenance

The Streambed can be left outside all year around. Acetylated wood weathers to a natural silver grey if left untreated outdoors. If you prefer the original look, scrub with a detergent or disinfectant solution. When dry, apply a tinted, nontoxic penetrating stain. Refinishing stain is available from customer service.

Periodically inspect for splinters, broken or loose parts, and/or malfunctions. Remove from service if any condition develops that might make operation unsafe.

Cleaning

Mud and dirt can be removed with scrub brush and water. Over time outdoors, surfaces may blacken with mildew. Remove with detergent or a disinfectant solution such as Milton Sterilising Fluid. Trays can be removed for cleaning.

User modifications

We cannot be responsible for modifications made by customers to our products in the field without our supervision, testing, or evaluation.

Ordering parts

To order replacement parts, contact customer service with a description of the part(s) needed and the ID code from the product.

Use only replacement parts supplied by Community Playthings.