



Product guide

W473, W472, W471 Outlast toddler platforms

IMPORTANT

Save these instructions for reference

Recommended use

Use Toddler platforms to create a safe, active play challenge for children developing their walking and climbing capabilities. These platforms are sturdy and portable, and may be used on a level non-abrasive surface.

For ages 9–36 months. Maximum user weight: 100 kg.

⚠ WARNING

- ▲ This product is intended for use by children of immature judgment and therefore adult supervision is required at all times.
- ▲ The Toddler platforms are part of an open-ended large muscle play system. Children can place this product in combination with other objects to create an injury hazard.
- ▲ Platforms should not be stacked on top of each other.
- ▲ Caregivers are responsible that platforms and beams are configured to support age-appropriate challenge.
- ▲ Fall hazard. To prevent injury, position platforms with no gaps between them. Do not use as “stepping stones”. Platforms should not be used on their sides.
- ▲ To prevent injury, maintain a clear zone of at least one metre around product(s).

If your shipment is incomplete, please call customer service. All the packaging from this product is recyclable (cardboard and LDPE). Please recycle in accordance with local guidelines.

Maintenance

Acetylated wood weathers to a natural silver grey if left untreated outdoors. If you prefer the original look, scrub with a detergent or disinfectant solution. When dry, apply a tinted, nontoxic penetrating stain. Refinishing stain is available from customer service.

Periodically inspect for splinters, broken or loose parts, and/or malfunctions. Remove from service if any condition develops that might make operation unsafe.

Construction

The wooden components are manufactured from long lasting acetylated wood and finished with a tinted nontoxic stain. All edges and corners are rounded for safety and ease of cleaning.

Stainless steel hardware is used throughout and plastic components are formulated to ensure long life in outdoor environments.

Cleaning

Mud and dirt can be removed with scrub brush and water. Over time outdoors, surfaces may blacken with mildew. Remove with detergent or a disinfectant solution such as Milton Sterilising Fluid.

User modifications

We cannot be responsible for modifications made by customers to our products in the field without our supervision, testing, or evaluation.

Ordering parts

To order replacement parts, contact customer service with a description of the part(s) needed and the ID code from the product.

Use only replacement parts supplied by Community Playthings.

