



Product guide

H571, H572, H558 Help Yourself Trolley

IMPORTANT

Save these instructions for reference

Recommended use

The Help Yourself Trolley provides mobile space for art/craft supplies such as modeling materials, paper up to A2 size, paper rolls, scissors, pens, pencils, ribbons and tape. Recommended for ages 2 to 8.

The H571 Help Yourself Trolley delivers in two boxes:

1. H557 Help Yourself Trolley
 - Help Yourself Trolley
 - 2 large removable shelves
 - 4 small removable shelves
2. H565 Help Yourself Trolley containers, clear
 - 1 dowel for ribbons and tape
 - 8 green cups
 - 7 quarter totes
 - 5 half totes
 - 3 shallow clear totes
 - 6 deep clear totes

The H572 Help Yourself Trolley delivers in two boxes:

1. H557 Help Yourself Trolley
 - Help Yourself Trolley
 - 2 large removable shelves
 - 4 small removable shelves
2. H566 Help Yourself Trolley containers, cream
 - 1 dowel for ribbons and tape
 - 8 green cups
 - 7 quarter totes
 - 5 half totes
 - 3 shallow cream totes
 - 6 deep cream totes

H558 Help Yourself Trolley with baskets delivers in two boxes:

1. H557 Help Yourself Trolley
 - 1 Help Yourself Trolley
 - 2 large removable shelves
 - 4 small removable shelves
2. H567 Help Yourself Trolley containers, baskets
 - 1 dowel for ribbons and tape
 - 8 green cups
 - 7 quarter totes
 - 5 half totes
 - 3 shallow clear totes
 - 6 deep polyrattan baskets

If your shipment is incomplete, please call customer service.

⚠ WARNING

- ▲ This product is intended for use by children of immature judgement, therefore supervision is required at all times.

⚠ CAUTION

- ▲ For indoor use only. The Help Yourself Trolley is not waterproof.

Assembly

The ribbon dowel is removable.

To remove the dowel:

1. Raise the left end of the dowel in the groove in the side, then slide it into the hole above the groove.
2. Raise the right end of the dowel and remove the dowel.

To insert the dowel:

1. Insert the left end of the dowel into the hole above the groove in the side.
2. Slide the right end into the hole in the partition.

Maintenance

Periodically inspect for cracks, breaks, loose parts, missing parts, and/or malfunctions. Remove the product from service if any condition develops that might make operation unsafe.

Construction

The wooden components are manufactured from solid birch and hardwood plywood protected with a child-safe finish. The cups and totes are plastic.

Cleaning

Wipe with a damp cloth and mild detergent. Dry immediately. Leaving water or cleaning agent on the surface may damage the finish.

User modifications

We cannot be responsible for modifications made by customers to our products in the field without our supervision, testing, or evaluation.

Ordering parts

To order replacement parts, contact customer service with a description of the part(s) needed and the ID code from the product.

Use only replacement parts supplied by Community Playthings.

All the packaging from this item is recyclable (cardboard and LDPE). Please recycle in accordance with local guidelines.