



# Product guide

C221, C122, C223, C224, C231, C232, C233, C234, C241, C242, C243, C244 Play tables

## IMPORTANT

Save these instructions for reference

## Recommended use

These products are designed to support dramatic play.

### ⚠ WARNING

▲ This product is intended for use by children of immature judgment, therefore supervision is required at all times.

### ⚠ CAUTION

▲ For indoor use only. This table is not waterproof.

## Assembly

Screw each leg into a socket, tightening with both hands.

When all legs are installed, position table on its legs. If table wobbles, check that the legs are fully inserted into the sockets.

**C221** Square Play table: The carton marked C229 contains the table top. A second carton contains four legs.

**C231** Round Play table: The carton marked C239 contains the table top. A second carton contains four legs.

**C241** Rectangular Play table: The carton marked C249 contains the table top. A second carton contains four legs.

**If your shipment is incomplete, please call customer service. All of our packaging is recyclable (cardboard and LDPE). Please recycle in accordance with local guidelines.**

## Size marking

The table legs and chairs are size marked to help determine the correct table/chair height ratio for the children under your care. Simply match the size marks on table legs and chairs.

## Cleaning

Wipe with a damp cloth and mild detergent. Dry immediately. Leaving water or cleaning agent on the surface may damage the finish.

## Construction

This table is made from solid birch with a clear child-safe finish.

## Maintenance

Periodically inspect for cracks, breaks, loose parts, or missing parts. Remove the product from service if any condition develops that might make operation unsafe.

## User modifications

We cannot be responsible for modifications made by customers to our products in the field without our supervision, testing, or evaluation.

## Ordering parts

To order replacement parts, contact customer service with a description of the part(s) needed and the ID code from the product.

**Use only replacement parts supplied by Community Playthings.**

## Community Playthings chair guide

Chair catalogue #	J505	J506	J708	J710	J712
Seat height	13 cm	17 cm	21 cm	26 cm	31 cm
Size mark #	000	00	0	1	2
1 year olds	50%	50%			
2 year olds			60%	40%	
3 year olds			20%	80%	
4 year olds				60%	40%
5 year olds				20%	80%
Size mark #	000	00	0	1	2
Table height	30 cm	36 cm	40 cm	46 cm	53 cm