



Product guide

W450, W451, W452 Outlast kitchenette

IMPORTANT

Save these instructions for reference

Recommended use

The Outlast mud kitchenette provides a setting for open ended outdoor role play. The kitchenette sink accommodates two sided play, while the arch adds an aesthetically beautiful touch.

The sturdy non-removable sink has a contoured basin and large drain to allow it to empty completely. The rubber plug is permanently attached.

For ages 1 to 3

⚠ WARNING

- ▲ This product is intended for use by children of immature judgement. Supervision is required at all times.
- ▲ Water is a drowning hazard. Do not leave sink full of water unattended.

⚠ CAUTION

- ▲ Adults are responsible to prevent these products from being used by children in unsafe combinations with other components. Make sure the unit is sitting securely on the ground.

Assembly

Your Outlast kitchenette counter or sink comes fully assembled and ready to use, and includes 1 shallow crate and 2 Nature trays.

If your shipment is incomplete, please call customer service. All of our packaging is recyclable (cardboard and LDPE). Please recycle in accordance with local guidelines.



Accessories

W446 Nature tray - small tray that can be used for handy storage or loose parts play.

W444 Kitchen scoop set - sturdy plastic scoops

Maintenance

Acetylated wood weathers to a natural silver grey if left untreated outdoors. If you prefer the original look, scrub with a detergent or disinfectant solution. When dry, apply a tinted, nontoxic penetrating stain. Refinishing stain is available from customer service.

Periodically inspect for splinters, broken or loose parts, and/or malfunctions. Remove from service if any condition develops that might make operation unsafe.

Construction

The wooden components are manufactured from long lasting acetylated wood and finished with a water based stain. All edges and corners are rounded for safety and ease of cleaning. End grain is protected by plastic guards. Stainless steel hardware is used throughout and plastic components are formulated to ensure long life in outdoor environments.

Cleaning

Mud and dirt can be removed with scrub brush and water. Over time outdoors, surfaces may blacken with mildew. Remove with detergent or a disinfectant solution such as Milton Sterilising Fluid.

User modifications

We are not responsible for modifications made by customers to our products in the field, without our supervision, testing or evaluation.

Ordering parts

To order replacement parts, contact customer service with a description of the part(s) needed and the ID code from the product.

Use only replacement parts supplied by Community Playthings.