

Product guide

W341, W351, W362, W363, 364, W365, W372, W373, 374, W375, W883, W884, W885, W886 Outlast tables and seating

IMPORTANT

Save these instructions for reference

Recommended use

The Outlast tables and seating support many outdoor activities including eating, art projects, manipulative and dramatic play. They are available in Low, Medium, High and School heights, and can be used almost anywhere outdoors as a combined set or individually.

The smooth wooden table top provides a stable, gap-free work surface. The wide stance of the legs ensure stability and maximises leg room.

Seats and benches are wide and stable. Handles in the centre of their tops enable easy hauling. Detached from the tables, they promote open-ended play and unlimited arrangements: at a picnic table, circled up for group gatherings, as balance beams, or for large muscle play.

A WARNING

- This product is intended for use by children of immature judgment, therefore supervision is required at all times.
- A Benches and seats are not designed to stack or nest.

A CAUTION

- Benches and seats are heavy. Encourage cooperation when transporting to prevent injury.
- ▲ Adults are responsible to prevent tables, seats and benches from being used by children in unsafe combinations with other components.
- ▲ To prevent injury, caregivers and staff must familiarize themselves with these materials before giving children access to them.

Accessories

Four lengths of table legs are available; for a table height of 40 cm, 46 cm, 50 cm or 56 cm.

Assembly

Benches and seats come fully assembled. They come in four heights, 20 cm, 25 cm, 30 cm and 35 cm. Sets consist of four cartons: a table top, table legs and two benches or seats.

The tables comes in two cartons, one containing the table top, and the other containing:

- Four legs
- Four barrel bolts
- Four machine screws
- Two hex keys

If your shipment is incomplete, please call customer service. Legs attach to plastic brackets.

- 1. Turn table upside down.
- 2. Slide legs all the way into brackets.
- 3. Insert bolts through aligned holes.
- 4. Tighten screws with hex keys provided.



Community Playthings, Brightling Road, Robertsbridge, TN32 5DR communityplaythings.co.uk • sales@communityplaythings.co.uk • 0800 387 457 © 2019 by Community Products (UK) Ltd • JV42 Eu 0709 Revision 02

A CAUTION

Assembly to be carried out by a competent adult only. During assembly children should be kept away from the product due to possible risk of injury.

Construction

The wooden components are manufactured from long-lasting acetylated wood and finished with a nontoxic stain. All edges and corners are rounded for safety and ease of cleaning.

Stainless steel hardware is used throughout and all end grain is protected by UV-resistant plastic guards formulated to ensure long life in outdoor environments.

Maintenance

The tables can be left outside all year around. Acetylated wood weathers to a natural silver grey if left untreated outdoors. If you prefer the original look, scrub with a detergent or disinfectant solution. When dry, apply a tinted, nontoxic penetrating stain. Refinishing stain is available from customer service.

Periodically inspect for splinters, broken or loose parts, and/or malfunctions. Remove from service if any condition develops that might make operation unsafe.

Cleaning

Mud and dirt can be removed with scrub brush and water. Over time outdoors, surfaces may blacken with mildew. Remove with detergent or a disinfectant solution such as Milton Sterilising Fluid.

User modifications

We cannot be responsible for modifications made by customers to our products in the field without our supervision, testing, or evaluation.

Ordering parts

To order replacement parts, contact customer service with a description of the part(s) needed and the ID code from the product.

Use only replacement parts supplied by Community Playthings.

All of our packaging is recyclable (cardboard and LDPE). Please recycle in accordance with local guidelines.

