



# Product guide

## R301 Starter scooter

### IMPORTANT

Save these instructions for reference

### Recommended use

**Recommended for ages 2 to 5 years, with a weight limit of 20 kg.**

### ⚠ WARNING

- ▲ This product is intended for use by children of immature judgment, therefore adult supervision is required at all times.
- ▲ Use only on level ground or indoors. Do not use near steps, sloped driveways, roads, alleys or swimming pools.
- ▲ Not to be used in traffic or on public highways due to a high risk of collision with motor vehicles or road users.
- ▲ Protective equipment should be worn. Not to be used in traffic. 20 kg max. Always wear helmet and shoes.

### ⚠ CAUTION

- ▲ This toy requires skill and must be used with caution to avoid falls and collisions causing injury to the user or other children or staff.

### Maintenance

Keep indoors or under cover when not in use.

Periodically inspect for cracks, breaks, loose parts, missing parts, and/or malfunctions. Remove the product from service if any condition develops that might make operation unsafe.

### Construction

Finish is baked-on powder coating.

Steering has bushings at the top and bottom of the head tube and internal oversteer protection that eliminates pinch points.

The frame is constructed of welded steel tubing.

Wheels are polypropylene with sealed ball bearings.

The footboard is slip-resistant plastic.

### User modifications

We cannot be responsible for modifications made by customers to our products in the field without our supervision, testing, or evaluation.

### Ordering parts

To order replacement parts, contact customer service with a description of the part(s) needed and the ID code from the product.

**Use only replacement parts supplied by Community Playthings.**

**All of our packaging is recyclable (cardboard and LDPE). Please recycle in accordance with local guidelines.**

