



Product guide

M800 Hollow Nook, M801 Nest Nook,
M812 Felt Board with Pocket, M813 Mirror Board with Pocket

IMPORTANT

Save these instructions for reference

Recommended use

The Nooks provide a calm space for children seeking retreat.

⚠ WARNING

- ▲ This product is intended for use by children of immature judgement and therefore adult supervision is required at all times.
- ▲ Fall hazard! Do not allow children to climb on top of the Nooks.
- ▲ Hollow Nook must never be used upside down.
- ▲ Never place Hollow Nook on its side as it will roll.
- ▲ Nooks must be lifted by two adults when moved.

Assembly

Nooks are delivered fully assembled. The curtain is fastened inside the opening using Velcro. It can be added and removed as needed.

Accessory Boards may be added inside the Nest Nook, and slot in to either side, with built-in hardware.



Maintenance

Periodically inspect for cracks, breaks, loose parts, missing parts, and/or malfunctions. Remove the product from service if any condition develops that might make operation unsafe.

Cleaning

Wipe wood with a damp cloth and mild detergent. Dry immediately. Leaving water or cleaning agent on the surface may damage the finish.

When cleaning plastic surfaces, do not use harsh detergents or cleansers as these may scratch or mar the surface. Non-toxic household plastic cleaners should work well.

Vacuum carpets frequently. If you need to wash them, they are removable. The carpet is attached with hook and loop fasteners. We recommend steam cleaning the carpet. Do not soak carpet to remove stains, dirt or other grime. Do not rinse under the tap or use excessive water. Carpet stains and spots should be attended to as soon as they occur.

Liquid stains like ink can be removed by using absorbent cloth. Solid stains should be taken out with a spoon or the end of a knife. To prevent the stain from spreading, don't rub it; instead, remove the stain by firmly dabbing it repeatedly with an absorbent cloth, starting from the edges and moving to the centre.

Construction

The Nooks are constructed from solid beech and hardwood plywood with a child-safe finish. Wood components are joined with durable plastic and zinc-plated screws.

Accessory boards are constructed from hardwood plywood and zinc-plated hardware.

User modifications

We cannot be responsible for modifications made by customers to our products in the field without our supervision, testing, or evaluation.

Ordering parts

To order replacement parts, contact customer service with a description of the part(s) needed and the ID code from the product. **Use only replacement parts supplied by Community Playthings.**

If your shipment is incomplete, please call customer service. All the packaging from this product is recyclable (cardboard and LDPE). Please recycle in accordance with local guidelines.

