



# Product guide

J408, J410, J413, J424, J444 Mealtime and Childshape chairs

## IMPORTANT

Save these instructions for reference

### Recommended use

The Mealtime chair comes with a pommel and seat belt. It is recommended for children ages 6 months to 24 months. It may be used at a table, or independently with the tray.

The Childshape chair comes without pommel or seat belt. The 20cm Childshape chair is recommended for ages 1½ to 3 years. The 25 cm Childshape chair is recommended for ages 2 to 4 years.

The Chair dolly is available for storing stacked chairs.

### ⚠ WARNING

- ▲ This product is intended for use by children of immature judgment, therefore supervision is required at all times.
- ▲ Seat belts are not intended for behavior management but for the safety of the user. Seat belts must be carefully adjusted for the comfort and security of the user and can never take the place of the caregiver. Use of seat belts must be closely supervised. Never leave a child unattended.
- ▲ The tray is not designed to hold the child in the chair. It is recommended that the chair be used only by children capable of sitting upright unassisted. The tray must be firmly latched into position.
- ▲ Stack chairs facing a wall to discourage climbing.
- ▲ Stack no more than five high to prevent instability.

### ⚠ CAUTION

- ▲ For indoor use only. This chair is not waterproof.

### Assembly

The Mealtime chair comes in two cartons. The chair is complete with pommel and seat belt. The tray comes in a separate carton.

To attach the tray, slide it over the armrests of the Mealtime chair until both latches engage in the notches in the armrest. To remove or adjust the tray, pull on the latches to disengage them from the notches. The tray cannot be used on a Childshape chair.

**If your shipment is incomplete, please call customer service. All of our packaging is recyclable (cardboard and LDPE). Please recycle in accordance with local guidelines.**

### Accessories

- J425 Replacement tray for Mealtime chair
- J426 12 replacement chair tips
- J439 Seat belt for Mealtime chair
- J413 Chair dolly

### Operation of Chair dolly

Always lock the castors after the Chair dolly has been moved. Store upright, against a wall, or in a closet where it will not be tripped over. This Chair dolly is not designed for use on deep carpet, rough floors or out of doors.

### Maintenance

Periodically inspect for cracks, breaks, loose parts, missing parts, and/or malfunctions. Remove the product from service if any condition develops that might make operation unsafe.

### Construction

Chairs are manufactured from formed hardwood protected with a child-safe finish. The tray is smooth, washable plastic. The seat belt is made of polypropylene webbing. The boots are moulded from a durable elastomer.

### Cleaning

Wipe wooden chair with a damp cloth and mild detergent. Dry immediately. Leaving water or cleaning agent on the surface may damage the finish. The seat belt is removable and machine washable. To remove seat belt, turn clip to fit through slot. Clean plastic tray with any mild soap or detergent. Avoid abrasive cleaner, aromatic spirits, and cleaning solutions containing pine oil. Some of these agents can cause plastic to weaken and crack.

### User modifications

We cannot be responsible for modifications made by customers to our products in the field without our supervision, testing, or evaluation.

### Ordering parts

To order replacement parts, contact customer service with a description of the part(s) needed and the ID code from the product.

**Use only replacement parts supplied by Community Playthings.**



Mealtime chair



Childshape chair