



Product guide

H505, H507, H525, H527 Floor easels and Art islands

IMPORTANT

Save these instructions for reference

Recommended use

Floor easels: for ages 1–3

Low art islands: for ages 2–5

High art islands: for ages 5–8

⚠ WARNING

- ▲ This product is intended for use by children of immature judgment, therefore supervision is required at all times.
- ▲ Never reconfigure the Art island with children nearby.
- ▲ Only use Floor easel on the floor, not on a tabletop. It may slide off.

⚠ CAUTION

- ▲ For indoor use only.

Assembly

Products consist of the following:

H505 Floor easel 71 cm wide

- 1 frame
- 2 chalkboard/whiteboards
- 2 trays and shelf assemblies
- 6 magnets (for attaching paper)

H500 Low art island 71 cm wide

- 1 H505 Floor easel 71 cm wide
- 1 H501 Low art island storage unit with 1 adjustable shelf

H515 High art island 71 cm wide

- 1 H505 Floor easel 71 cm wide
- 1 H516 High art island storage unit with 1 adjustable shelf

H525 Floor easel 132 cm wide

- 1 frame
- 2 chalkboard/whiteboards
- 4 trays and shelf assemblies
- 12 magnets (for attaching paper)

H520 Low art island 132 cm wide

- 1 H525 Floor easel 132 cm wide
- 1 H521 Low art island storage unit with 1 adjustable shelf
- 2 snap-in Shelf dividers

H530 High art island 132 cm wide

- 1 H525 Floor easel 132 cm wide
- 1 H531 High art island storage unit with 1 adjustable shelf
- 3 snap-in Shelf dividers

If your shipment is incomplete, please call customer service.

All of our packaging is recyclable (cardboard and LDPE).

Please recycle in accordance with local guidelines.



H505 Floor easel
71 cm wide



H500 Low art island
71 cm wide



H515 High art island
71 cm wide



H525 Floor easel
132 cm wide



H520 Low art island
132 cm wide



H530 High art island
132 cm wide

To assemble the Art island:

1. Open the easel frame all the way so the stays are straight.
2. Place the easel frame on the storage unit (if applicable) making sure all four latches engage.
3. Snap the shelf/tray assemblies onto the lower cross-member.
4. Place the chalkboard/whiteboard panel on the green hooks.
5. Secure the panel by screwing in the light brown clips to catch the sides of the board (See Figure A).

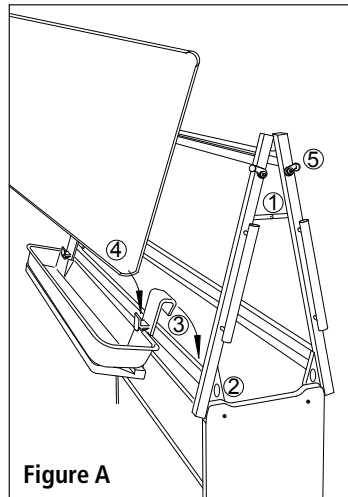 


Figure A

Operation

To remove the easel frame, press the two yellow buttons at the end and lift.

To install the tray, place it flat on the shelf and centred between the green brackets. Press back firmly, one end at a time, until the tray snaps into place.

To remove the tray (see Figure B) use fingers and thumb to lever the tray away from the easel.

The adjustable plywood shelf fits into the grooves on the sides.

The tote boxes are supported by snap-in tote dividers which fit into holes in the sides of the unit.

To put in a tote divider slide the divider into the shelf (at an angle). Insert two pins into the holes in the side. Push up on the divider until the pins snap into the slots in the partition.

To remove a divider, push up under one side of the divider until the pins snap out of the holes.

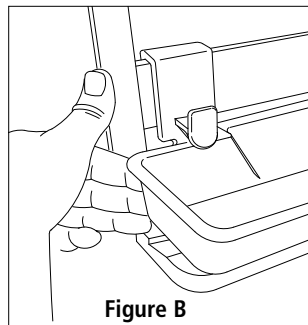 


Figure B

Hide-away wheels

It is important to understand how to operate the mobility feature.

1. With one person at each end of the unit, tip unit slightly forward or back, allowing the toe trim to pivot.
2. One person keeps the item tipped, while the other rotates the toe trim to the desired position by pulling or pushing on one of the handholds at each end of the toe trim. (Figure C)
3. Tip the unit slightly to the other side and repeat the procedure with the other toe trim.
4. After disengaging the wheels, give item a small sideways push to settle the wheels into place. You will notice the item sitting down securely on its glides.

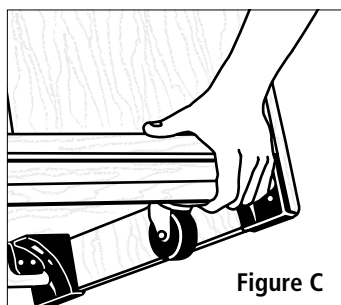 


Figure C

WARNING

- ▲ Unit may tip when rolled sideways. Always push from an end. Never move with children nearby. Always disengage wheels after moving.

CAUTION

- ▲ Removing the easel frame or engaging the mobility needs two people.
- ▲ Never change the position of the toe trim with less than two people.
- ▲ Always use the handholds provided at each end of the toe trim. (Figure C)

Accessories

Also available from customer service: Magnets for holding paper, Tote pans 8 cm deep, and Tote pans 15 cm deep.

Maintenance

Periodically inspect for cracks, breaks, loose parts, missing parts, and/or malfunctions. Remove the product from service when any condition develops that might make operation unsafe.

Construction

The easel frame and storage unit are constructed of solid hardwood protected with a child-safe finish.

The adjustable shelf is made of plywood.

The chalkboard/whiteboards are enamelled steel with a foam core.

Cleaning

The chalkboard/whiteboard can be cleaned using a soft dry cloth.

If the ink has been left on for a long time, rub clean with a dry cloth and then use a cleaner recommended by the supplier of your whiteboard markers or use a non-abrasive general purpose cleaner. Wipe off residual paint with warm water.

Wipe wooden parts with a damp cloth and mild detergent. Dry immediately. Leaving water or cleaning agent on the surface may damage the finish.

Abrasive cleaning agents will damage the chalkboard/whiteboard surface.

Steel magnets may scratch the chalkboard/whiteboard.

User modifications

We cannot be responsible for modifications made by customers to our products in the field without our supervision, testing, or evaluation.

Ordering parts

To order replacement parts, contact customer service with a description of the part(s) needed and the ID Code from the product.

Use only replacement parts supplied by Community Playthings.