



Product guide

W323, W324, W333, W334 Outlast crates

IMPORTANT

Save these instructions for reference

Recommended use

The Outlast crates are intended as an outdoor open-ended plaything for children ages two and older, as well as for storage of toys and materials. Use crates on their own or in combination with Outlast blocks, which are made with modular dimensions. Crates can be stacked for storage.

Large crates fit on the shelf of a 61cm Water table and in a Storage bench. Shallow crates fit on the shelf of a 46cm Water table.

⚠ WARNING

- ▲ This product is intended for use by children of immature judgment, therefore supervision is required at all times.
- ▲ When a crate is used on a shelf within reach of children beware of overloading.

⚠ CAUTION

- ▲ Do not stack Outlast crates more than 85 cm high (equivalent to three deep crates).
- ▲ Do not climb on stacked crates.
- ▲ The Outlast crates are part of an open-ended, large muscle play system. Adults are responsible to prevent them from being employed by children in unsafe combinations with other components.
- ▲ To prevent injury, caregivers and staff must familiarize themselves with these materials before giving children access to them.

Construction

The wooden components are manufactured from long-lasting acetylated wood and finished with a nontoxic stain. All edges and corners are rounded for safety and ease of cleaning.

Stainless steel hardware is used throughout and plastic components are UV-resistant and engineered to ensure long life in outdoor environments.

Maintenance

The crates can be left outside all year around. Acetylated wood weathers to a natural silver grey if left untreated outdoors. If you prefer the original look, scrub with a detergent or disinfectant solution. When dry, apply a tinted, nontoxic penetrating stain. Refinishing stain is available from customer service.

Periodically inspect for splinters, broken or loose parts, and/or malfunctions. Remove from service if any condition develops that might make operation unsafe.

Cleaning

Mud and dirt can be removed with scrub brush and water. Over time outdoors, surfaces may blacken with mildew. Remove with detergent or a disinfectant solution such as Milton Sterilising Fluid.

User modifications

We cannot be responsible for modifications made by customers to our products in the field without our supervision, testing, or evaluation.

Ordering parts

To order replacement parts, contact customer service with a description of the part(s) needed and the ID code from the product.

Use only replacement parts supplied by Community Playthings.

All of our packaging is recyclable (cardboard and LDPE). Please recycle in accordance with local guidelines.

