



Product guide

J900 Glider

IMPORTANT

Save these instructions for reference

Recommended use

This glider is designed for general nursery, classroom or home use.

⚠ WARNING

- ▲ Keep nearby children under supervision at all times.
- ▲ Keep children from reaching under glider. Although this product has been designed to eliminate major entrapment and pinch hazards, there are moving parts underneath.
- ▲ Weight limit: 109 kg

⚠ CAUTION

- ▲ For indoor use only. Glider is not waterproof.

Maintenance

Periodically inspect for cracks, breaks, loose parts, missing parts, and/or malfunctions. Remove the product from service if any condition develops that might make operation unsafe.



Cleaning

Wipe clean with a soft cloth and warm water, using your standard detergent. Safe antibacterial surface cleansers can also be applied. Rinse off all cleaning agents and disinfectants and dry with a cloth. Do not machine wash, as seams are not waterproof.

Construction

The wooden components are manufactured from hardwood and finished with a clear wood finish. All edges and corners are rounded for safety and ease of cleaning. The upholstery is CMHR polyurethane foam covered with a highly durable and stain resistant silicone coated fabric. The upholstery complies with Furniture and Furnishings (Fire)(Safety) Regulations 1988 as well as BS 7176 Medium Hazard Category.

User modifications

We cannot be responsible for modifications made by customers to our products in the field without our supervision, testing, or evaluation.

Ordering parts

To order replacement parts, contact customer service with a description of the part(s) needed and the ID code from the product.

Use only replacement parts supplied by Community Playthings.

All of our packaging is recyclable (cardboard and LDPE). Please recycle in accordance with local guidelines.