



Product guide

C221, C1222, C223, C224, C231, C232, C233, C234,
C241, C242, C243, C244 Play tables

IMPORTANT

Save these instructions for reference

Recommended use

These products are designed to support dramatic play.

⚠ WARNING

▲ This product is intended for use by children of immature judgment, therefore supervision is required at all times.

⚠ CAUTION

▲ For indoor use only. This table is not waterproof.

Assembly

Screw each leg into a socket, tightening with both hands.

When all legs are installed, position table on its legs. If table wobbles, check that the legs are fully inserted into the sockets.

C221 Square Play table: The carton marked C229 contains the table top. A second carton contains four legs.

C231 Round Play table: The carton marked C239 contains the table top. A second carton contains four legs.

C241 Rectangular Play table: The carton marked C249 contains the table top. A second carton contains four legs.

If your shipment is incomplete, please call customer service. All of our packaging is recyclable (cardboard and LDPE). Please recycle in accordance with local guidelines.

Size marking

The table legs and chairs are size marked to help determine the correct table/chair height ratio for the children under your care. Simply match the size marks on table legs and chairs.

Cleaning

Wipe with a damp cloth and mild detergent. Dry immediately. Leaving water or cleaning agent on the surface may damage the finish.

Construction

This table is made from solid birch with a clear child-safe finish.

Maintenance

Periodically inspect for cracks, breaks, loose parts, or missing parts. Remove the product from service if any condition develops that might make operation unsafe.

User modifications

We cannot be responsible for modifications made by customers to our products in the field without our supervision, testing, or evaluation.

Ordering parts

To order replacement parts, contact customer service with a description of the part(s) needed and the ID code from the product.

Use only replacement parts supplied by Community Playthings.

Community Playthings chair guide

Chair catalogue #	J505	J506	J708	J710	J712
Seat height	13 cm	17 cm	21 cm	26 cm	31 cm
Size mark #	000	00	0	1	2
1 year olds	50%	50%			
2 year olds			60%	40%	
3 year olds			20%	80%	
4 year olds				60%	40%
5 year olds				20%	80%
Size mark #	000	00	0	1	2
Table height	30 cm	36 cm	40 cm	46 cm	53 cm