



# Product guide

W502 Outlast Rectangular Art Table  
W501 Outlast Square Art Table

## IMPORTANT

Save these instructions for reference

## Recommended use

The Outlast Art Tables support open-ended outdoor art activities and mark making. Supply trays clip onto rails on the ends of the table to maximize available work surface.

## ⚠ WARNING

- ▲ Forceful impact to the table surface could break or damage the acrylic.
- ▲ This product is intended for use by children of immature judgement, therefore supervision is required at all times.

## Accessories


Four lengths of table legs are available; for a table height of 40 cm, 46 cm, 50 cm or 56 cm.

## Assembly

The tables comes in two cartons, one containing the table top, and the other containing:

- Four legs
- Four barrel bolts
- Four machine screws
- Two hex keys

## Legs attach to plastic brackets.

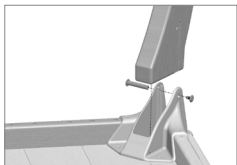

1. Turn table upside down.
2. Slide legs all the way into brackets.
3. Insert bolts through aligned holes.
4. Tighten screws with hex keys provided.

## ⚠ CAUTION

- ▲ Assembly to be carried out by a competent adult only. During assembly children should be kept away from the product due to possible risk of injury.

## Construction

The wooden components are manufactured from long-lasting acetylated wood and finished with a nontoxic stain. All edges and corners are rounded for safety and ease of cleaning.

The table top surface is UV stable frosted acrylic.

Stainless steel hardware is used throughout and all end grain is protected by UV-resistant plastic guards formulated to ensure long life in outdoor environments.

## Maintenance

The tables can be left outside all year around. Acetylated wood weathers to a natural silver grey if left untreated outdoors. If you prefer the original look, scrub with a detergent or disinfectant solution. When dry, apply a tinted, nontoxic penetrating stain. Refinishing stain is available from customer service.

Frosted acrylic is UV stable and durable in the outdoors. Deep scratches and gouges made by sharp objects such as keys, screwdrivers and knives cannot be repaired. Fine scratches may be reduced in severity or cosmetically hidden by using a plastic scratch remover, such as a NOVUS® branded plastic scratch remover, and a soft flannel pad.

Periodically inspect for splinters, broken or loose parts, and/or malfunctions. Remove from service if any condition develops that might make operation unsafe.

## Cleaning

Mud and dirt can be removed with scrub brush and water. Over time outdoors, surfaces may blacken with mildew. Remove with detergent or a disinfectant solution such as Milton Sterilising Fluid. Clean acrylic surfaces with a mild soap solution and a soft cloth.

## User modifications

We cannot be responsible for modifications made by customers to our products in the field without our supervision, testing, or evaluation.

## Ordering parts

To order replacement parts, contact customer service with a description of the part(s) needed and the ID code from the product.

**Use only replacement parts supplied by Community Playthings.**

**All of our packaging is recyclable (cardboard and LDPE). Please recycle in accordance with local guidelines.**