



Product guide

C530, C535, C537, C512, C513, C501, C502, C503, C504, C505, C506, C509, C510, Home corner furniture

IMPORTANT

Save these instructions for reference

Recommended use

Home corner furniture is intended for use by children from 1 to 6 years. It offers a wide range of imaginative play and learning opportunities which allow children to act out what they see in the world around them.

⚠ WARNING

- ▲ This product is intended for use by children of immature judgement, therefore supervision is required at all times. An adult should do all stacking and un-stacking of units.
- ▲ Ensure latches are fully engaged when units are stacked. To test this, lift the top unit to ensure it does not separate from the Drawer on which it is stacked.
- ▲ Do not exceed a counter height of 81 cm. Units may become unstable when stacked too high
- ▲ Keep curtain away from fire.

Configurations

All items, including another Drawer, can be stacked onto a Drawer. Stacking is easier with two adults.



The Arch fits into the holes in the tops of the Welsh dresser. Curtains can be removed.

⚠ CAUTION

- ▲ Make sure both ends of the Arch are firmly in the holes to prevent the Arch from coming loose.

Maintenance

Periodically inspect for cracks, breaks, loose parts, missing parts, and/or malfunctions. Check that latches are still working. Remove the product from service if any condition develops that might make operation unsafe.

Cleaning

Wooden parts: Wipe with a damp cloth and mild detergent. Dry immediately. Leaving water or cleaning agent on the surface may damage the finish.

Mirrors and windows: Dust and clean with a soft cloth to avoid scratching. Use a mild detergent. Dry by blotting with a cloth.

Whiteboard backs: Wipe clean with a soft, dry cloth. If the ink has been left on a long time, rub clean with a dry cloth and then use a cleaner recommended by the supplier of your whiteboard markers. Abrasive cleaning agents will damage the whiteboard surface. Steel magnets may scratch the whiteboard.

Fabrics: The curtains can be machine washed at 40°C and tumble-dried medium. Alternatively, spot wash with warm water and a mild detergent and air dry.

Construction

Wooden components are manufactured from solid beech or beech plywood and are protected with a child-safe finish.

Backs are bamboo or magnetic ceramic whiteboard bonded to a plastic core.

Mirrors and the Cooker window are made of durable polymers.

The sink bowl is plastic.

Curtains are polycotton.

User modifications

We cannot be responsible for modifications made by customers to our products in the field without our supervision, testing, or evaluation.

Ordering parts

To order replacement parts, contact customer service with a description of the part(s) needed and the ID code from the product. **Use only replacement parts supplied by Community Playthings.**

All of our packaging is recyclable (cardboard and LDPE).

Please recycle in accordance with local guidelines.

Home corner sets and components

Home corner sets:	C501 Low cabinet	C502 Low sink	C503 Low cooker	C504 Washing machine	C505 Fridge	C506 Welsh dresser	C510 Arch	C509 Drawer
Kitchenette C525		1	1			1		2
Toddler collection C530	1	1	1	1		1		
Country kitchen C535		1	1	1	1	2		4
Sussex kitchen C537		1	1			2	1	2
Starter home corner C538		1	1	1				
Complete home corner C555	1	1	1	1	1	2	1	8

Make sure all the components of your Home corner sets arrived in good condition. If any parts are broken or missing, call customer service.