



# Product guide

C252, C530, C535, C540, C550, C537, C512, C513, C514, C515 C501, C502, C503, C504, C505, C506, C507, C509, C510, C518 Play collection

## IMPORTANT

Save these instructions for reference

## Recommended use


The Play Collection is intended for use by children from 1 to 6 years. It offers a wide range of imaginative play and learning opportunities which allow children to act out what they see in the world around them.

## ⚠ WARNING

- ▲ This product is intended for use by children of immature judgement, therefore supervision is required at all times. An adult should do all stacking and un-stacking of units.
- ▲ Ensure latches are fully engaged when units are stacked. To test this, lift the top unit to ensure it does not separate from the Drawer on which it is stacked.
- ▲ Baskets are woven from natural materials and small parts may break off. We do not advise their use with children under 36 months unless adequately supervised.
- ▲ Do not exceed a counter height of 81 cm. Units may become unstable when stacked too high
- ▲ Keep curtain away from fire.

## Configurations

All items, including another Drawer, can be stacked onto a Drawer. Stacking is easier with two adults.

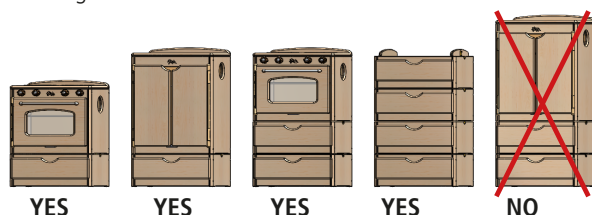

The Arch fits into the holes in the tops of the Welsh dresser and the Counter. Curtains can be removed.

## ⚠ CAUTION

- ▲ Make sure both ends of the Arch are firmly in the holes to prevent the Arch from coming loose.

## Maintenance

Periodically inspect for cracks, breaks, loose parts, missing parts, and/or malfunctions. Check that latches are still working. Remove the product from service if any condition develops that might make operation unsafe.

## Cleaning

**Wooden parts:** Wipe with a damp cloth and mild detergent. Dry immediately. Leaving water or cleaning agent on the surface may damage the finish.

**Mirrors and windows:** Dust and clean with a soft cloth to avoid scratching. Use a mild detergent. Dry by blotting with a cloth.

**Whiteboard backs:** Wipe clean with a soft, dry cloth. If the ink has been left on a long time, rub clean with a dry cloth and then use a cleaner recommended by the supplier of your whiteboard markers. Abrasive cleaning agents will damage the whiteboard surface. Steel magnets may scratch the whiteboard.

**Fabrics:** The curtains and cushion cover can be machine washed at 40°C and tumble-dried medium. Alternatively, spot wash with warm water and a mild detergent and air dry.

## ⚠ CAUTION

- ▲ Do not wash the cushion filler. Remove and wash the outer cover only.

## Construction

**Wooden components** are manufactured from solid birch or birch plywood and are protected with a child-safe finish.

**Backs** are bamboo or magnetic ceramic whiteboard bonded to a plastic core.

**Mirrors and the Cooker** window are made of durable polymers.

**Baskets** are woven of rattan cane, sealed with a child-safe finish.

**The sink bowl** is plastic.

**Curtains** are polycotton.

**The Cushion** has a polycotton cover, and polyester fibre filler.

## User modifications

We cannot be responsible for modifications made by customers to our products in the field without our supervision, testing, or evaluation.

## Ordering parts

To order replacement parts, contact customer service with a description of the part(s) needed and the ID code from the product. **Use only replacement parts supplied by Community Playthings.**

**All of our packaging is recyclable (cardboard and LDPE). Please recycle in accordance with local guidelines.**

## Play Collection sets and components

Play Collection sets:	C501 Low cabinet	C502 Low sink	C503 Low cooker	C504 Washing machine	C505 Fridge	C506 Welsh dresser	C507 Counter	C510 Arch	C509 Drawer	C518 Cushion pair
Welsh dressers & Arch C514						2		1		
Shop and stage C515							1	1	2	
Kitchenette C525		1	1			1			2	
Toddler collection C530	1	1	1	1		1				
Country kitchen C535		1	1	1	1	2			4	1
Creative collection C540	1				1	2	1	1	4	1
Grand collection C550	2	1	1	1	2	2	1	1	8	2

Make sure all the components of your Play Collection arrived in good condition. If any parts are broken or missing, call customer service.