



Product guide

G248, G268 Changing table

IMPORTANT

Save these instructions for reference

Recommended use

The Community Playthings Changing table is suitable for changing the nappies of children up to 4 years of age or 45 kg. The Changing table conforms to EN12221.

⚠ WARNING

- ▲ This product is intended for use by children of immature judgment, therefore supervision is required at all times.
- ▲ Keep at least one hand on child at all times during changing to prevent accidental falls. The safety of the child is the responsibility of the care-giver.
- ▲ Be aware of the risk of open fires and other sources of strong heat, such as electric bar fires, gas fires, etc. in the near vicinity of the changing unit.

Assembly

Your Changing table comes assembled. The adjustable shelf or shelves are packaged separately in the main carton. The contoured pan is packed in a separate carton.

G268

Changing table with steps and 1 adjustable shelf includes:

G260 Cabinet with steps

G246 Contoured pan

G248

Changing table with storage and 2 adjustable shelves includes:

G240 Cabinet with storage

G246 Contoured pan

Accessories

The **G28** Wall mounted shelf is designed to be used with the Changing table. It offers shelf space with individual compartments and can be mounted within easy reach of the changing table.

G245 Two additional removable shelves for the Changing table.

G265 Two additional small shelves for the Changing table with storage (right hand compartment).

G269 Extra storage for **G268** includes

2 Additional Shelves (G245)

8 Deep clear trays

G249 Extra storage for **G248** includes

 
4 Additional shelves (G245 and G265)

12 Deep clear trays

Operation

Steps (optional):

To lower the steps push the thumb latch up and pull out and down on the handle.

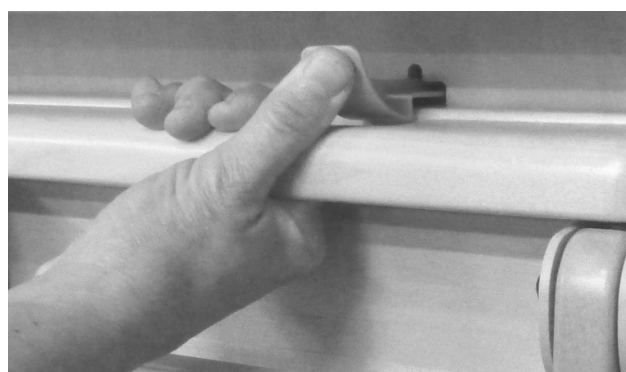

For safety, steps retract and latch automatically. Use the foot pedal provided to hold steps down as you guide the child up to the changing surface. When you remove your foot from the pedal, the steps will retract. When the child is ready to come down, lower the steps, place your foot on the pedal, and assist the child.

⚠ CAUTION

- ▲ Make sure children are standing clear when the steps are being lowered and raised. A child on the floor could get pinched in the step mechanism.
- ▲ The wheels on the unit must be disengaged before the steps are used (see hide-away wheels feature). Using the steps when the wheels are down could damage the steps.
- ▲ Load on the steps should not exceed 45 kg.

⚠ WARNING

- ▲ Children must be assisted up the steps and onto the changing table.
- ▲ Steps must always retract. In no way should the care-giver cause the steps to remain down unassisted. If steps do not automatically retract, discontinue use and contact customer service.

The doors have a child-proof lock to allow for storage of items that should be inaccessible to children. The lock is operated by turning the latch 90° to the left. A plastic key is provided for this, although any key, coin or similar object will work as well.

 


Hide-away wheels

The hide-away wheels can be engaged and disengaged using the following procedure:

1. With one person at each end, tip the unit slightly forward or back. This allows the toe trim to pivot.
2. While one person holds the item in the tipped position, the other rotates the toe trim by pulling or pushing on one of the hand-holds at either end of the toe trim to engage or disengage the wheels.
3. Tip the unit slightly to the other side and repeat the procedure with the other toe trim.

NOTE: To prevent objects from falling off shelves, tip unit back and engage the front wheels first. When disengaging wheels, tip unit forward, and release rear wheels first.

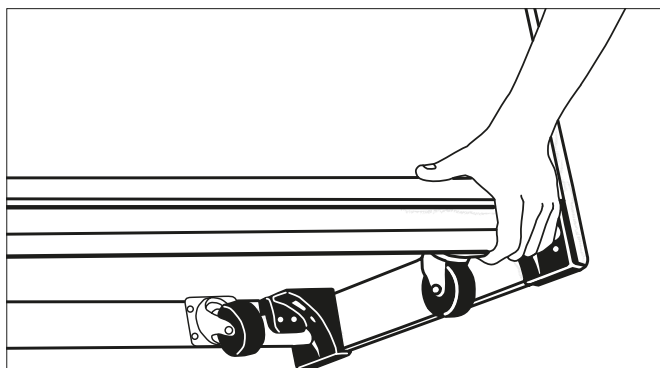

⚠ CAUTION

- ▲ Always engage or disengage wheels with two people. Failure to do this could cause back strain or pinching of your hands.
- ▲ Always use the hand-holds provided at each end of the toe trim.

⚠ WARNING

- ▲ When moving the Changing table, always push from an end.
- ▲ Never move with children nearby.
- ▲ Always disengage wheels after moving.

Maintenance

Periodically inspect for cracks, breaks, loose parts, missing parts, and/or malfunctions. Remove the product from service if any condition develops that might make operation unsafe.

Occasionally use a light oil on the moving metal parts of the step assembly. Do not oil the plastic parts.

Over time the gas spring that lifts the steps may lose pressure. This could cause failure of the steps to close and latch. If this happens, call customer service for a replacement.

Cleaning

Wipe wood surfaces with a damp cloth and mild detergent. Dry immediately. Leaving water or cleaning agent on the surface may damage the finish.

Steps should be wiped periodically to remove dirt or sand which may prevent the proper functioning of the moving parts.

Contoured pan can be washed with mild detergent and water. For disinfecting, we recommend hydrogen peroxide disinfectants. Also acceptable are Oxivir Plus Spray and Milton Antibacterial Surface Spray.

DO NOT USE alcohol, pine oil, or iodine-based products.

DO NOT USE abrasive cleaning pads.

These may discolour the pan and weaken the surface.

Construction

The wooden components are manufactured from solid birch and birch plywood protected with a child-safe finish.

The metal treads are finished with anti-slip paint.

User modifications

We cannot be responsible for modifications made by customers to our products in the field without our supervision, testing, or evaluation.

Ordering parts

To order replacement parts, contact customer service with a description of the part(s) needed and the ID code from the product.

Use only replacement parts supplied by Community Playthings.

All of the packaging from this product is recyclable (cardboard and LDPE). Please recycle in accordance with local guidelines.