IMPORTANT

Save these instructions for reference

Recommended use

The Book cart provides a unique, accessible and versatile book display or storage system for young children.

A WARNING


▲ This product is intended for use by children of immature judgment, therefore supervision is required at all times.

A CAUTION

▲ For indoor use only. The Book cart is not waterproof.

Operation

To remove a divider from the bin (e.g. for cleaning), tilt the divider in the bin until it snaps loose (Figure A). To reinsert the divider, first slip the top end under the top rails, then rotate the bottom end downward.

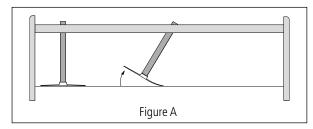

Maintenance

Periodically inspect for cracks, breaks, loose parts, missing parts, and/ or malfunctions. Remove the product from service if any condition develops that might make operation unsafe.

Construction

The wooden components are manufactured from solid birch protected with a child-safe finish. All edges and corners are rounded. The clear bin is made from durable plastic.

Cleaning

Wipe with a damp cloth and mild detergent. Dry immediately. Leaving water or cleaning agent on the surface may damage the finish.

A CAUTION

▲ Do not use abrasive cleaners or organic solvents such as acetone or paint thinners to clean the clear plastic bin.

User modifications

We are not responsible for modifications made by customers to our products without our supervision, testing or evaluation.

Mobility

This item comes with four sturdy castors fastened to the toe-trim. These can be easily engaged and disengaged using the following procedure (See Figure B):

- With one person at each end of the unit, tip unit slightly forward or back. This allows the toe trim to pivot.
- 2. One person keeps the item tipped, while the other rotates the toe trim to the desired position by pulling or pushing on one of the handholds at each end of the toe trim (see Figure B).
- m e g Figure B
- 3. Tip the unit slightly and repeat the procedure with the other toe trim.

CAUTION

- ▲ Never change the position of the toe trim with less than two people.
- ▲ Always use the handholds provided at each end of the toe trim.
- ▲ After disengaging the wheels, give item a small sideways push to settle the wheels into place. The item will sit down securely on its glides.

Accessories

F779 Pair of bookends

Two additional dividers to insert in the bin or use separately.

Ordering parts

To order replacement parts, contact customer service with a description of the part(s) needed and the ID code from the product.

Use only replacement parts supplied by Community Playthings.

All of our packaging is recyclable (cardboard and LDPE). Please recycle in accordance with local guidelines.