



Product guide

F483 Roomscapes entry

IMPORTANT! SAVE THESE INSTRUCTIONS FOR REFERENCE

Recommended use

The Roomscapes entry creates a secure barrier to small children while allowing easy access for adults. It is intended for use with children up to 24 months of age. Gates conform to EN 1930.

⚠ WARNING

- ▲ To prevent serious injury, securely install gate or enclosure and use according to manufacturer's instructions.
- ▲ Never use with a child able to climb over or dislodge the gate or enclosure.
- ▲ Never leave children unattended.
- ▲ The safety barrier must not be fitted across windows.

⚠ CAUTION

- ▲ The Roomscapes entry should be attached at both ends to a wall or furniture by Roomscapes posts 81 cm or longer. Use Wall adapters where needed. The gate is not a toy. Children should not play on the gate.
- ▲ Roomscapes shelves and panels attached to the entry must be at least 61 cm high.
- ▲ Roomscapes shelves attached to the entry must be at least 94 cm long or connected at 45° or 90° to the gate threshold, with the following exception: the Roomscapes entry may connect in a straight line with a panel or 63 cm shelf, but only if the hinge side is connected to a 94 cm shelf (or longer), to a wall, or to angled panels.
- ▲ F483 Roomscapes entry should not be used adjacent to an Adjustable panel or Adjustable gate extenders

Assembly

To connect the couplings to Roomscapes, please follow the Roomscapes product guide.

If the gate is used at the top of stairs, it must not open over the stairs.

If your shipment is incomplete, please call customer service.

All the packaging from this product is recyclable (cardboard and LDPE). Please recycle in accordance with local guidelines.

Operation

The gate swings 180° both ways. The latch is operated by simultaneously squeezing the hand-hold above and trigger below. To close the gate, manually push it shut. No operation of the trigger is necessary for latching.

Maintenance

The latch and hinges are engineered to never need lubrication. Periodically inspect for secure connections, cracks, breaks, loose parts, missing parts, and/or malfunctions. Check plastic posts to be sure that all child-proof lock rings are engaged and working. Remove the product from service if any condition develops that might make operation unsafe.

Construction

The arch and gate are made from hardwood plywood and solid birch, protected with a child-safe finish. Gate panel joints are glued mortise and tenon, pinned with a screw. Threshold is powder coated aluminium. Hinges and latches are made from durable, engineered plastic.

Cleaning

Wooden parts: wipe with a damp cloth and mild detergent. Do not use excessive water.

For all plastic parts and threshold, dust with a soft, damp cloth or chamois. Wash with dishwashing detergent and plenty of lukewarm water.

User modifications

We recognize that some users might benefit from modifications made in the field. However, we are not responsible for modifications made by customers to our products in the field, without our supervision, testing or evaluation.

Ordering Parts

To order replacement parts, contact customer service with a description of the part(s) needed and the ID code from the product.

Use only replacement parts supplied by Community Playthings.