



# Product guide

## A691 Low sensory table

### IMPORTANT

Save these instructions for reference

### Recommended use

Use the Low sensory table to provide sensory play opportunities near floor level.

Recommended for children ages 9 to 15 months.

#### ⚠ WARNING

- ▲ This product is intended for use by children of immature judgment, therefore supervision is required at all times.
- ▲ Water is a drowning hazard. Do not use water in the pan.
- ▲ Make sure pan is empty before moving to avoid injury.

#### ⚠ CAUTION

- ▲ For indoor use only. The Low sensory table is not waterproof.
- ▲ Only use the shallow pan supplied with this table.
- ▲ This product is intended for indoor use only.

### Table assembly

The Low sensory table delivers fully assembled in a single carton with a table, pan and lid.

**If your shipment is incomplete, please call customer service.**

### Operation

Recommended for use with sensory play materials.

Water must not be used in the Low sensory table as this may create a drowning hazard for small children.

### Storage

The Low sensory table should be stored indoors with the pan dry.

### Maintenance

Periodically inspect for cracks, breaks, loose parts, missing parts, and/or malfunctions. Remove the product from service if any condition develops that might make operation unsafe.

### Cleaning

The pan can be washed with soap or mild detergent and water. Disinfectants can be used. Do not use abrasive cleaners. Wipe wooden components with a damp cloth and mild detergent. Dry immediately.

### Construction

The frame and legs are made of solid hardwood protected with a child-safe finish.

The corners and pan are made of durable plastic, free from styrene, phthalates and BPA.

**All of the packaging from this product is recyclable (cardboard and LDPE). Please recycle in accordance with local guidelines.**

### User modifications

We cannot be responsible for modifications made by customers to our products in the field without our supervision, testing, or evaluation.

### Ordering parts

To order replacement parts, contact customer service with a description of the part(s) needed and the ID code from the product.

**Use only replacement parts supplied by Community Playthings.**

