



Product guide

W422, W423, W432, W433 Outlast water table

IMPORTANT

Save these instructions for reference

Recommended use

The Outlast water tables support outdoor sand and water play and provide built-in storage. Pans neatly contain wet materials but can also be used with sand or natural loose parts. Tough waterproof lids tidily cover pans when not in use. The wide, smooth space around the pan creates a work surface. The shelf provides a convenient space for storage. The table is stable and durable, allowing it to be used almost anywhere outdoors, e.g. garden, sand pit, messy areas.

⚠ WARNING

- ▲ This product is intended for use by children of immature judgment, therefore supervision is required at all times.
- ▲ Water is a drowning hazard. Do not leave pan of water unattended.

⚠ CAUTION

- ▲ Adults are responsible to prevent Outlast water tables from being employed by children in unsafe combinations with other components.

Assembly

Your Outlast water table comes fully assembled.

The Water table set also includes crate(s) and a Flow pan.

If your shipment is incomplete, please call customer service. All of our packaging is recyclable (cardboard and LDPE). Please recycle in accordance with local guidelines.

Accessories

Tables are available in two heights, 46cm and 61cm.

Outlast Flow pan adds an extra level and water flow possibilities.

Crates provide convenient storage and come in two sizes. The Outlast deep crate fits in the 61cm table only. The Outlast shallow crate will fit on any table shelf.

Construction

The wooden components are manufactured from long-lasting acetylated wood and finished with a nontoxic stain. All edges and corners are rounded for safety and ease of cleaning.

Stainless steel hardware is used throughout and plastic components are UV-resistant and engineered to ensure long life in outdoor environments.

Maintenance

The tables can be left outside all year around. Acetylated wood weathers to a natural silver grey if left untreated outdoors. If you prefer the original look, scrub with a detergent or disinfectant solution. When dry, apply a tinted, nontoxic penetrating stain. Refinishing stain is available from customer service.

Periodically inspect for splinters, broken or loose parts, and/or malfunctions. Remove from service if any condition develops that might make operation unsafe.

Cleaning

Mud and dirt can be removed with scrub brush and water. Over time outdoors, surfaces may blacken with mildew. Remove with detergent or a disinfectant solution such as Milton Sterilising Fluid.

User modifications

We cannot be responsible for modifications made by customers to our products in the field without our supervision, testing, or evaluation.

Ordering parts

To order replacement parts, contact customer service with a description of the part(s) needed and the ID code from the product.

Use only replacement parts supplied by Community Playthings.

