

IMPORTANT

Save these instructions for reference

Recommended use

The Child's rocking chair is recommended for children ages 2 to 5 years. Maximum user weight 30 kg.

A WARNING

▲ This product is intended for use by children of immature judgment, therefore supervision is required at all times.

A CAUTION

▲ For indoor use only.

Maintenance

Periodically inspect for cracks, breaks, loose parts, missing parts, and/ or malfunctions. Remove the product from service if any condition develops that might make operation unsafe.

Cleaning

Wipe with a damp cloth and mild detergent. Dry immediately. Leaving water or cleaning agent on the surface may damage the finish.

Construction

Chairs are manufactured from formed hardwood and rockers from solid birch protected with a child-safe finish.

User modifications

We cannot be responsible for modifications made by customers to our products in the field without our supervision, testing, or evaluation.

Ordering parts

To order replacement parts, contact customer service with a description of the part(s) needed and the ID code from the product.

Use only replacement parts supplied by Community Playthings.

All of our packaging is recyclable (cardboard and LDPE). Please recycle in accordance with local guidelines.

