



Product guide

M820, M825, M830, M832, M833, M834,
M835, M836, M837, M838 FlexiDen

IMPORTANT

Save these instructions for reference

Recommended use

The FlexiDen provides a calm space for children seeking retreat, and for teaching regulation skills. It can be configured in many ways using the provided FlexiDen Connectors. Its use may be expanded as a cosy reading arch or play space. For the FlexiDen Arch, use optional FlexiDen Back Panel to enclose the space and to enable use independent from the wall of a room. Accessory Board options may be added for storage, sound absorption, mirrors, or hook-and-loop display.

- The FlexiDen is appropriate for children aged 2 years and older.
- The FlexiDen is not intended for use without the fabric canopy.
- Use only on a flat, level surface.
- Assemble as directed in this product guide.

⚠ WARNING

- ▲ This product is intended for use by children of immature judgement, therefore supervision is required at all times.
- ▲ The Half Arch section must always be joined to another opposite Half Arch.
- ▲ A FlexiDen must be assembled or moved by an adult.
- ▲ Fall hazard! Do not allow children to climb on top of the FlexiDen.
- ▲ Entrapment hazard. Always use the provided connector to eliminate hazardous gaps between units.

Assembly

FlexiDen sections deliver fully assembled. They must be connected together at the base using the FlexiDen Connectors provided with each item, and the arched sections must be connected together at the top with the built-in connectors. Assistance of a second person is advisable when setting up or moving a FlexiDen.



Scan here to view a video showing how to assemble and disassemble your FlexiDen.

1. Assemble the largest pieces

- First place a FlexiDen Connector into the base locating notch of one arched section. (Fig. A)
- Position the adjacent arched section so that its corresponding locating notch engages fully with the secured connector. (Fig. B)



Figure A



Figure B



Figure C

- To connect the tops of the arched sections, raise one section slightly at the peak to align and engage the top connectors. Then lower the section so it settles securely into the base connector. The Half Arch sections have additional spring-loaded latch plungers to hold them securely together. (Fig. C)

2. Add the platforms

- Ensure all components are fully seated and securely locked together.
- Place a connector into the two base locating notches (Fig. D)
- Position the platforms, ensuring each notch has a connector in it. (Fig E–F)



Figure D



Figure E



Figure F

3. Add accessories (for Arch M835, M836 and Island Arch M837, M838)

- Accessory Boards attach inside each Half Arch, and slot into either side, with built-in hardware.
- The Back Panel is fixed onto two adjoining Half Arches by lowering its bottom edge into two FlexiDen Connectors at the bottom whilst allowing built-in connecting channels at the top to capture the arches of the FlexiDen.

To disassemble and move a FlexiDen, the process is reversed. To separate two Half Arches, pull the plunger latches out and lift a corner to disengage the top connectors one at a time.

Maintenance

Periodically inspect for cracks, breaks, loose parts, missing parts, and/or malfunctions. Remove the product from service if any condition develops that might make operation unsafe.

Construction

The FlexiDen is constructed from solid beech and hardwood plywood with a child-safe finish. Wood components are joined with durable plastic and zinc-plated screws.

Accessory Boards are constructed from hardwood plywood and zinc-plated hardware.

Cleaning

Wipe wood with a damp cloth and mild detergent. Dry immediately. Leaving water or cleaning agent on the surface may damage the finish.

When cleaning plastic surfaces, do not use harsh detergents or cleansers as these may scratch or mar the surface. Non-toxic household plastic cleaners should work well.

Vacuum carpets frequently. If you need to wash them, they are removable. The carpet is attached with hook-and-loop fasteners, but a tool like a flat screw driver or table knife may be required to lift a corner to create a place to pull. We recommend steam-cleaning the carpet. Do not soak carpet to remove stains, dirt or other grime. Do not rinse under the tap or use excessive water. Carpet stains and spots should be attended to as soon as they occur.

Liquid stains like ink can be removed by using absorbent cloth. Solid stains should be taken out with a spoon or the end of a knife. To

prevent the stain from spreading, don't rub it; instead, remove the stain by firmly dabbing it repeatedly with an absorbent cloth, starting from the edges and moving to the centre.

The fabric may be removed for washing. It is fastened with hook-and-loop at the base, and can then be pulled upwards, sliding it from the capturing rail. Reverse the process to reinstall.

User modifications

We cannot be responsible for modifications made by customers to our products in the field without our supervision, testing, or evaluation.

Ordering parts

To order replacement parts, contact customer service with a description of the part(s) needed and the ID code from the product.

Use only replacement parts supplied by Community Playthings.

If your shipment is incomplete, please call customer service.

All of the packaging from this product is recyclable (cardboard and LDPE). Please recycle in accordance with local guidelines.



Cove
M820 and M825



Island Cove
M830 and M832



Shell Cove
M833 and M834



Arch
M835 and M836



Island Arch
M837 and M838