



Product guide

A692, A693, A694, A696, A697 Sand and water tables

IMPORTANT

Save these instructions for reference

Recommended use

This Sand and water table provides a solid, height adjustable, mobile place for play with sand and water or other sensory materials.

Recommended for children ages 1 to 6 years.

⚠ WARNING

- ▲ This product is intended for use by children of immature judgment, therefore supervision is required at all times.
- ▲ Water is a drowning hazard. Do not leave pan of water unattended.
- ▲ Make sure pan is empty before moving to avoid injury.

⚠ CAUTION

- ▲ Do not use the Sand and water table on a sloped or soft surface as it may make it unstable.
- ▲ Water on the floor is slippery. Clean up spills.
- ▲ This product is intended for indoor use only.

Table Assembly

Sand and water tables deliver fully assembled and ready to use in a single carton.

Small sand and water table includes one table, one pan and one lid. Large single table includes one table, one pan and one lid. Large double table includes one table, two pans and two lids.

If your shipment is incomplete, please call customer service.

Adjustments

To raise or lower the table:

1. Empty and remove the pan before adjusting.
2. Loosen the star knob on each leg (anticlockwise).
3. Pull and twist each leg to the desired height setting with the bolt following the adjustment pattern. Allow the bolts to fully engage in the upward-facing spurs of the pattern.
4. When all four bolts are in place tighten four star knobs (clockwise) to secure the legs.

Operation

To drain the pan, place a bucket below the spout and unscrew the plug. Ensure that threads are clean and free of sand before replacing the plug. Dry wooden components after use.

To remove pan from the Large double table, lift end clear and pull towards you. To replace pan, insert edge under central "bridge" and lower pan into place.

Height recommendations:

- Low setting for ages 15 to 24 months.
- Middle setting for ages 2 to 3 years.
- High setting for ages 3 to 6 years.

Maintenance

Periodically check that star knobs remain tight. Periodically inspect for cracks, breaks, loose parts, missing parts, and/or malfunctions. Remove the product from service if any condition develops that might make operation unsafe.

Cleaning

The pan can be washed with soap or mild detergent and water. Disinfectants can be used. Do not use abrasive cleaners. Wipe wooden components with a damp cloth and mild detergent. Dry immediately.

Construction

The frame and legs are made of solid hardwood protected with a child-safe finish.

The corners are made from plastic and aluminium.

The pans are made of PETG and are free of BPA.

All of our packaging is recyclable (cardboard and LDPE). Please recycle in accordance with local guidelines.

User modifications

We cannot be responsible for modifications made by customers to our products in the field without our supervision, testing or evaluation.

Ordering parts

To order replacement parts, contact customer service with a description of the part(s) needed and the ID code from the product.

Use only replacement parts supplied by Community Playthings.

