



Product guide

D411, D412, D414, D417, D418, D413, D416 Activity tray, Activity tray-table

IMPORTANT

Save these instructions for reference

Recommended use

This Activity tray-table provides a height-adjustable activity tray for both small world and sensory play. The tray may also be used without legs as a floor tray. The clip-on tabletop quickly converts the item into a usable table surface or can be used as a cover for the tray.

⚠ WARNING

- ▲ This product is intended for use by children of immature judgement, therefore supervision is required at all times.
- ▲ Do not stand or sit on the table.


⚠ CAUTION

- ▲ Do not use the Activity tray-table on a sloped surface as it may make it unstable.
- ▲ Only use the shallow tray supplied with this table.
- ▲ This product is intended for indoor use only.
- ▲ This table will be unstable if the legs are not installed according to instructions.

Assembly


This product consists of the wooden frame, legs (if selected), a plastic tray and the tabletop (if selected). See Community Playthings website or catalogue for options. The Activity tray-table must be assembled by an adult.

To attach legs:

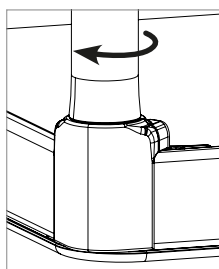

Screw legs into sockets, tightening with both hands. If table wobbles, check that the legs are fully inserted.

Height adjustment (only Activity tray or tray-table)

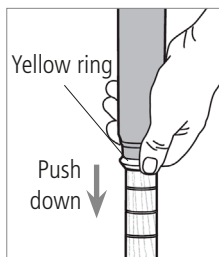

To raise the height, pull out wooden part of each table leg. Make sure the leg clicks into place.

To lower the height, hold yellow ring on each leg down, while pushing wood insert into sleeve.

Height recommendations

- Activity floor tray or tray-table: 9–15 months
- Activity tray or tray-table with
 - Medium legs: 15 months – 6 years
 - High legs: 3 years and over

For seated activities: match height to an existing table of the correct height, or subtract 1 from size mark of chair. (Example: for size mark 2 chair, set table legs to setting 1.)

If your shipment is incomplete, please call customer service.

All of the packaging from this product is recyclable (card-board and LDPE). Please recycle in accordance with local guidelines.

Operation

Recommended for use with sensory and small world play material.

Some paints and dyes may stain the tray.

Can be used with water under careful supervision.

The tray can be removed from the table frame easily for convenient cleaning.

The tabletop should only be used if the tray is in place.

Storage

The Activity tray-table should be stored indoors with a dry tray.

Maintenance

Periodically inspect for cracks, breaks, loose parts, missing parts, and/or malfunctions. Remove the product from service if any condition develops that might make operation unsafe.

Construction

The frame is made of solid hardwood protected with a child-safe finish. The tray is made from PETG. The tabletop is constructed with a hardwood plywood core laminated on both sides for structural stability. Adjustable legs are solid hardwood telescoping from aluminium sleeves.

Cleaning

The tray can be washed with soap or mild detergent and water. Disinfectants can be used. Do not use abrasive cleaners. Wipe wooden components with a damp cloth and mild detergent. Dry immediately.

User modifications

We cannot be responsible for modifications made by customers to our products in the field without our supervision, testing, or evaluation.

Ordering parts

To order replacement parts, contact customer service with a description of the part(s) needed and the ID code from the product.

Use only replacement parts supplied by Community Playthings.