



Product guide

F778 Browser box

IMPORTANT

Save these instructions for reference

Recommended use

The Browser box provides an accessible book display or storage system for infants and toddlers.

⚠ WARNING

▲ This product is intended for use by children of immature judgment, therefore supervision is required at all times.

⚠ CAUTION

▲ For indoor use only. The Browser box is not waterproof.

Operation

To remove a divider from the bin (e.g. for cleaning), tilt the divider in the bin until it snaps loose (Figure A). To reinsert the divider, first slip the top end under the top rails, then rotate the bottom end downward.

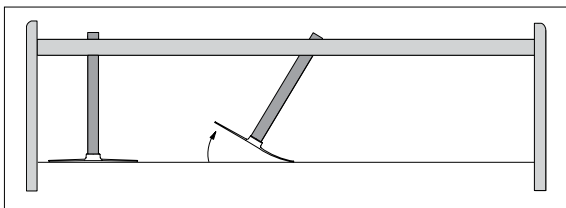


Figure A

Maintenance

Periodically inspect for cracks, breaks, loose parts, missing parts, and/or malfunctions. Remove the product from service if any condition develops that might make operation unsafe.

Cleaning

Wipe with a damp cloth and mild detergent. Dry immediately. Leaving water or cleaning agent on the surface may damage the finish.

⚠ CAUTION

▲ Do not use abrasive cleaners or organic solvents such as acetone or paint thinners to clean the clear plastic bin.

Construction

The wooden components are manufactured from solid birch protected with a child-safe finish. All edges and corners are rounded. The clear bin is made from durable plastic.

Accessories

F779 Pair of bookends

Two additional dividers to insert in the bin or use separately.

User modifications

We cannot be responsible for modifications made by customers to our products in the field without our supervision, testing or evaluation.

Ordering parts

To order replacement parts, contact customer service with a description of the part(s) needed and the ID code from the product.

Use only replacement parts supplied by Community Playthings.

All of our packaging is recyclable (cardboard and LDPE). Please recycle in accordance with local guidelines.