



Product guide

C704, C705, C714, C715 Drama centre

IMPORTANT

Save these instructions for reference

Recommended Use

Intended for creative and dramatic play. The Drama centre is recommended for children ages 3 to 5 years. The Compact drama centre is recommended for children ages 2 to 4 years.

⚠ WARNING

- ▲ This product is intended for use by children of immature judgment, therefore supervision is required at all times. Never reconfigure the Drama centre with children nearby.
- ▲ The arches are intended for use on the Dress-up unit only.

⚠ CAUTION

- ▲ For indoor use only. The Dress-up unit and Arches are not waterproof.

Products consist of the following, depending on what you ordered:

C700 Drama centre includes:

- **C705** Dress-up unit, 3 deep trays and 3 shallow tote pans.
- **C706** Arches kit with two arches and Flowie

C710 Compact drama centre includes:

- **C715** Compact dress-up unit
- **C716** Compact arches kit with two arches and Flowie

Flowie is available in 3 different colours: C707 Sage, C708 Sky, and C709 Sand. **If your shipment is incomplete, please call customer service. All of our packaging is recyclable (cardboard and LDPE). Please recycle in accordance with local guidelines.**

Cleaning

Wipe with a damp cloth and mild detergent. Dry immediately. Leaving water or cleaning agent on the surface may damage the finish.

The Flowie is washable with a cold wash: 40° C.

Construction

The Dress-up unit is constructed of solid birch protected with a child-safe finish.

The Arches are constructed of birch plywood and solid birch.

The Flowie is made of a strong, fire resistant micromesh. It complies with EN71-2.

To move the Dress-up Unit:

The mobility feature can be easily engaged, and disengaged.

1. With one person at each end of the unit, tip slightly back.
2. One person keeps the item tipped, while the other rotates the toe trim to the desired position. (Figure A)
3. Tip the unit slightly to the other side and repeat the procedure with the other toe trim.

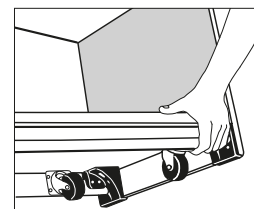


Figure A

⚠ CAUTION

- ▲ Always change the position of the toe trim with at least two people.
- ▲ Always use the handholds provided at each end of the toe trim. (Figure A)
- ▲ After disengaging the wheels, give item a small sideways push to settle the wheels into place. You will notice the item sitting down securely on its glides.

⚠ WARNING

- ▲ The Dress-up unit may tip when rolled sideways. Always push from an end. Never move with children nearby. Always disengage wheels after moving.

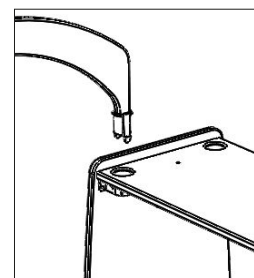


Figure B

To attach the arches:

Place latch through hole in top shelf of Dress-up unit. To release arch, squeeze tabs together and lift up on arch. (Figure B)

Maintenance

Periodically inspect for cracks, breaks, loose parts, missing parts, and/or malfunctions. Remove the product from service when any condition develops that might make operation unsafe.

User Modifications

We recognize that some users might benefit from modifications made in the field. However, we cannot be responsible for modifications made by customers to our products, without our supervision, testing or evaluation.

Ordering Parts

To order replacement parts, contact Customer Service with a description of the part(s) needed and the ID Code from the product.

Use only replacement parts supplied by Community Playthings.